





## 07. Lubricate the Z Rod

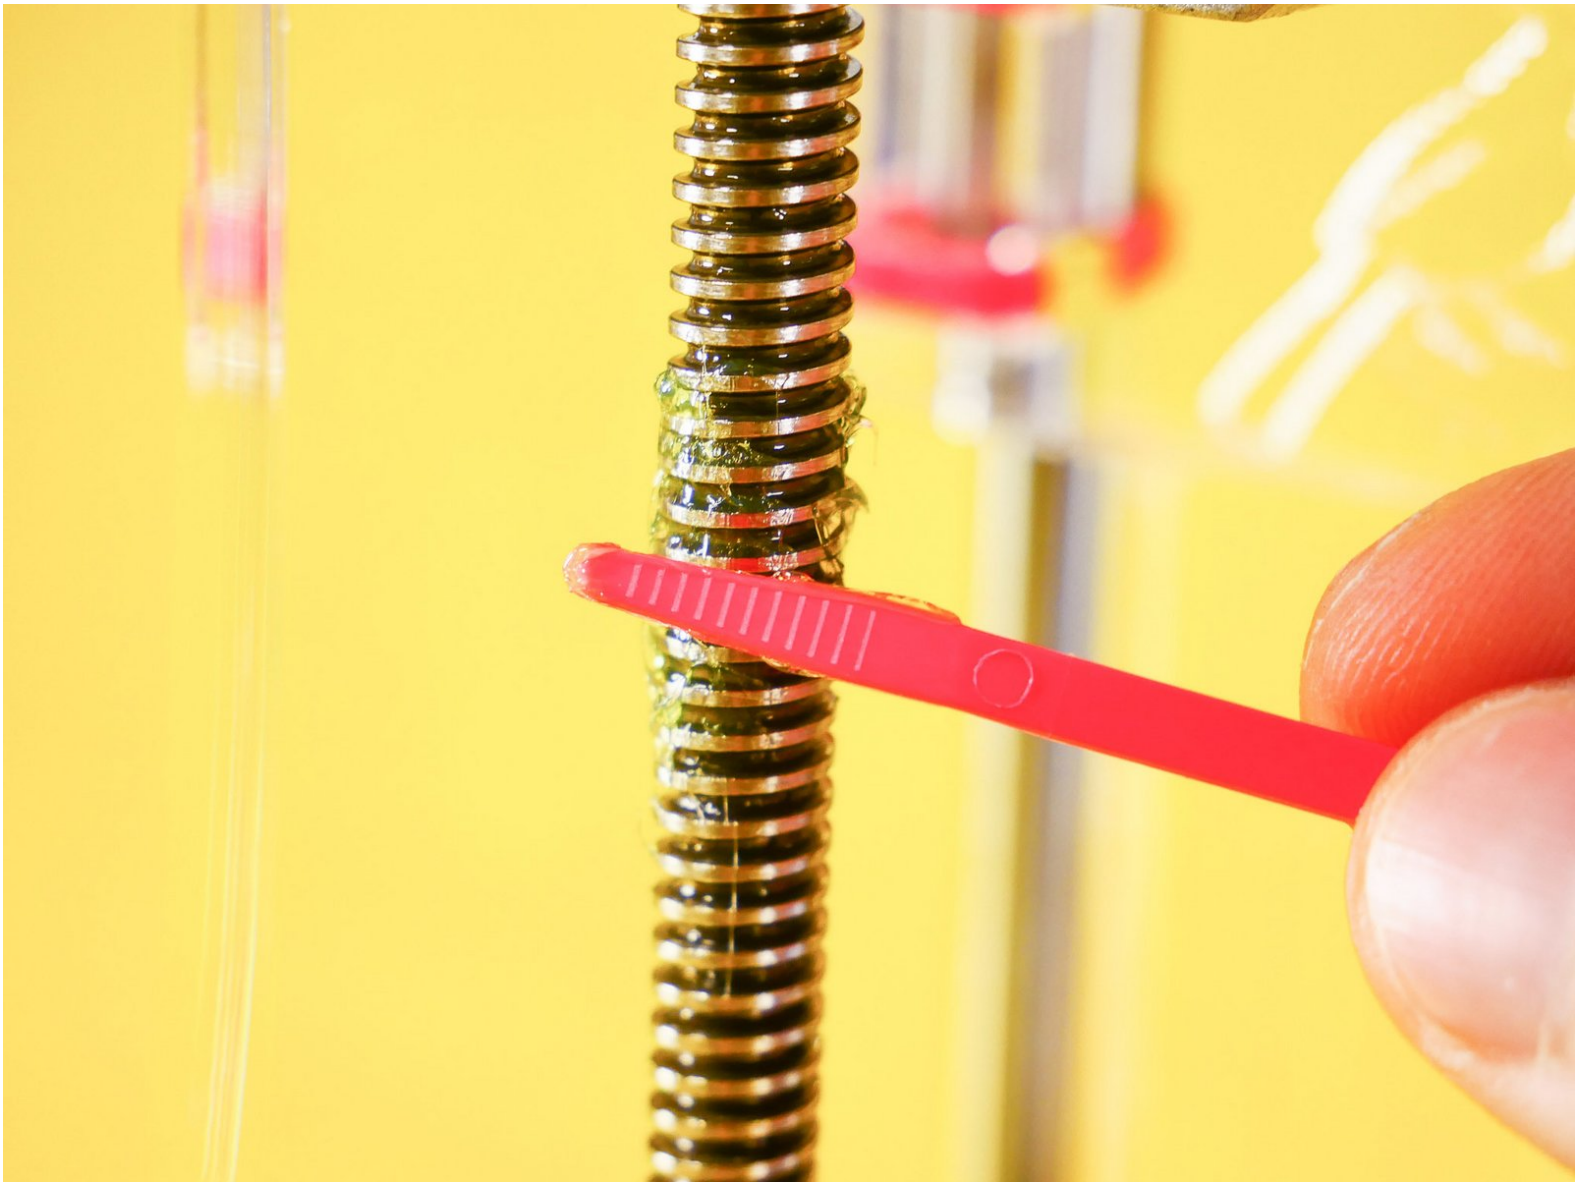


## Step 1 — ↳ Lubricate the Z Rod

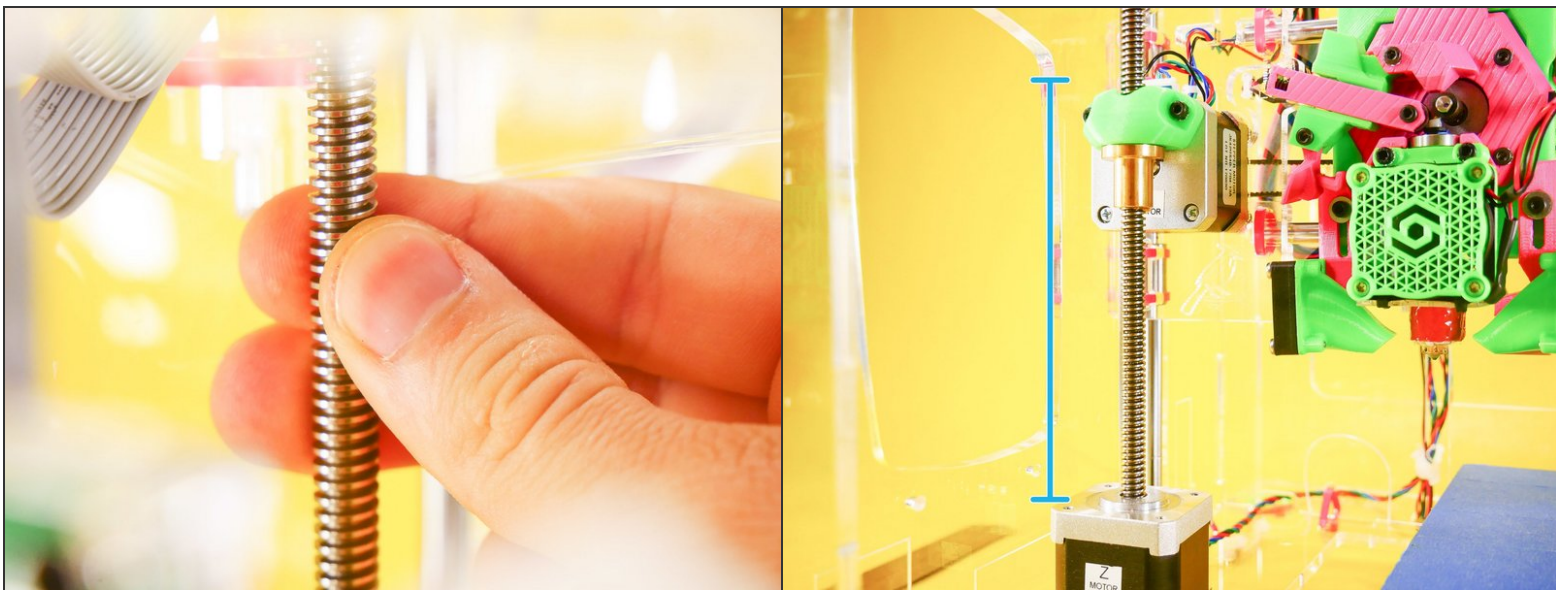


- Rotate the Z rod to move the whole X assembly about *this* high.

## Step 2

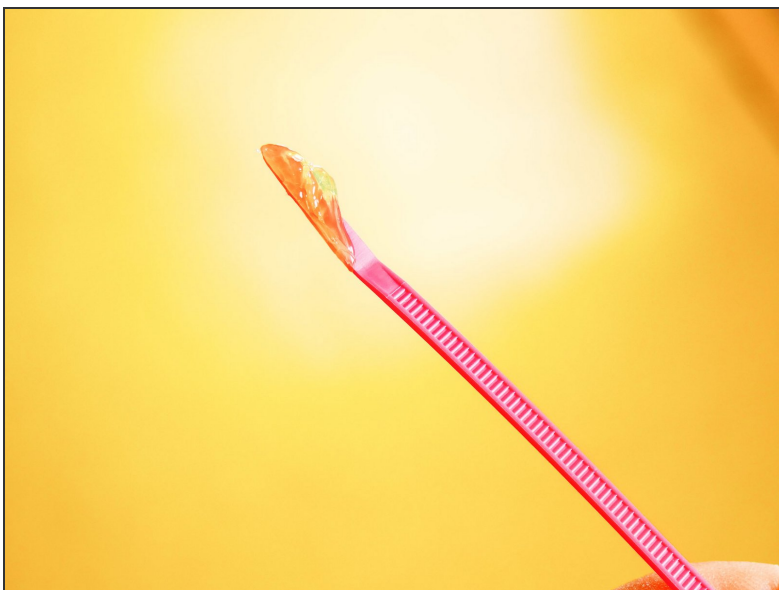

- Get some of that *lithium grease* from the little pack in the tools box.

### Step 3

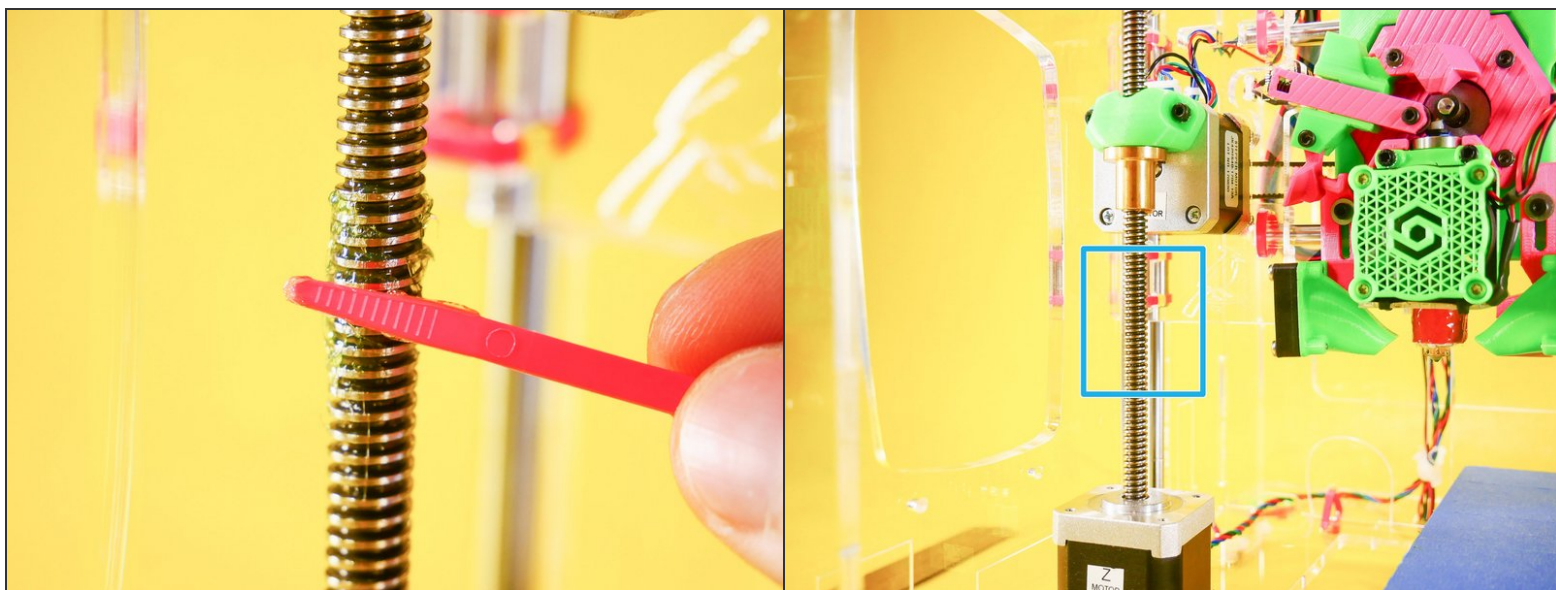

- Apply the grease below the zx coupler.
- As the X assembly will travel up and down during future prints, it will distribute the grease.