



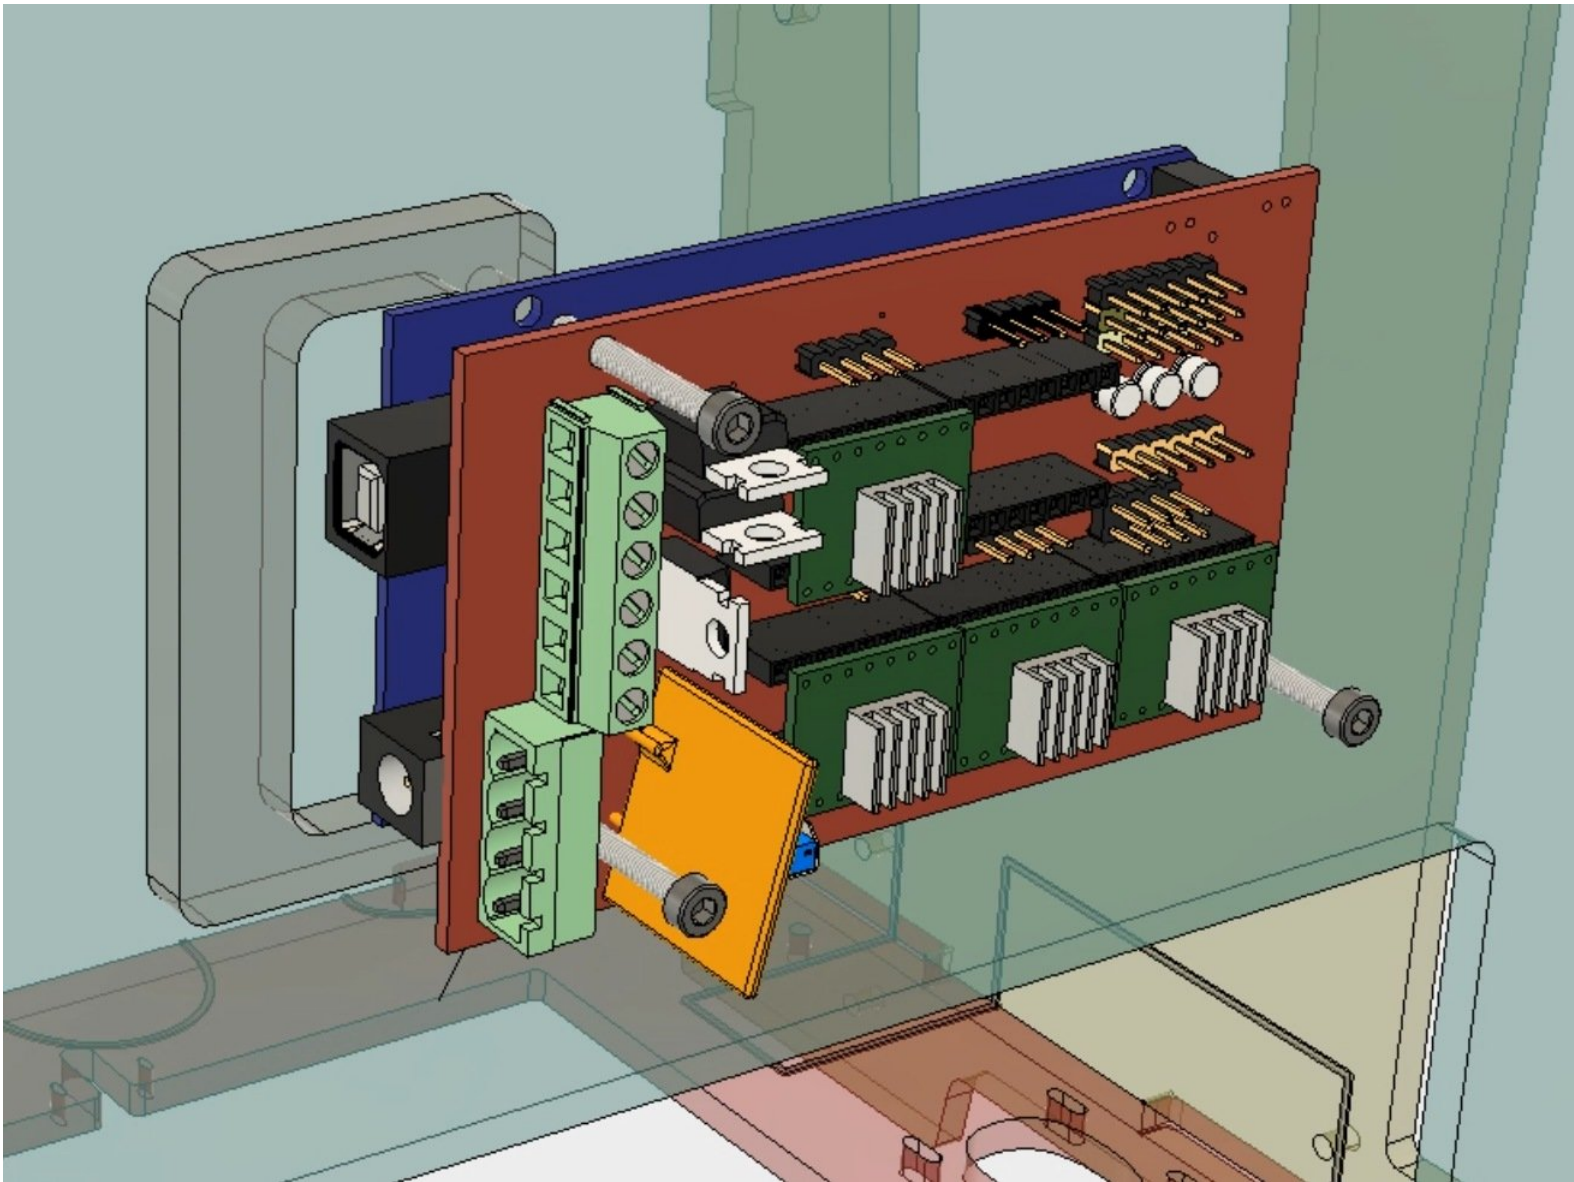

How to Install the RAMPS Sandwich



Step 1 — How to Install the RAMPS Sandwich

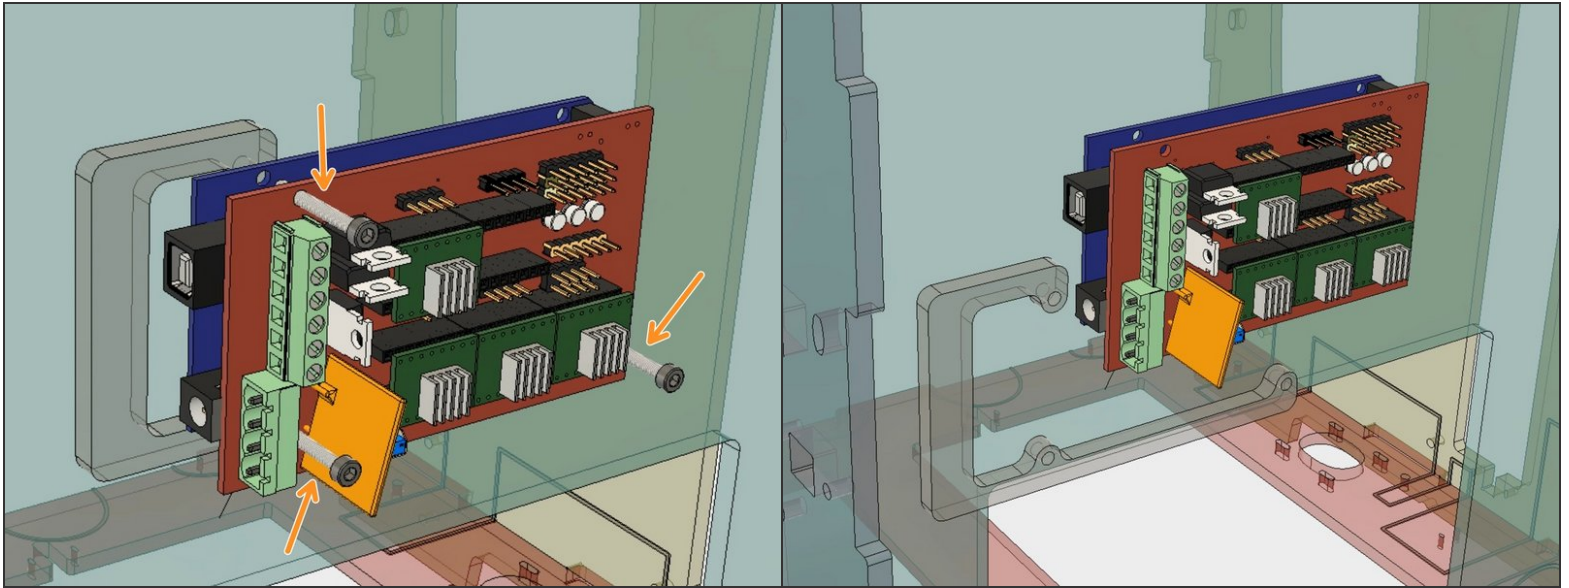

- M3x25 socket head screws
- Acrylic spacer

⚠ Don't put here any washers lest you may short your RAMPS board.