





How to Install the X Endstop and Wire Harness

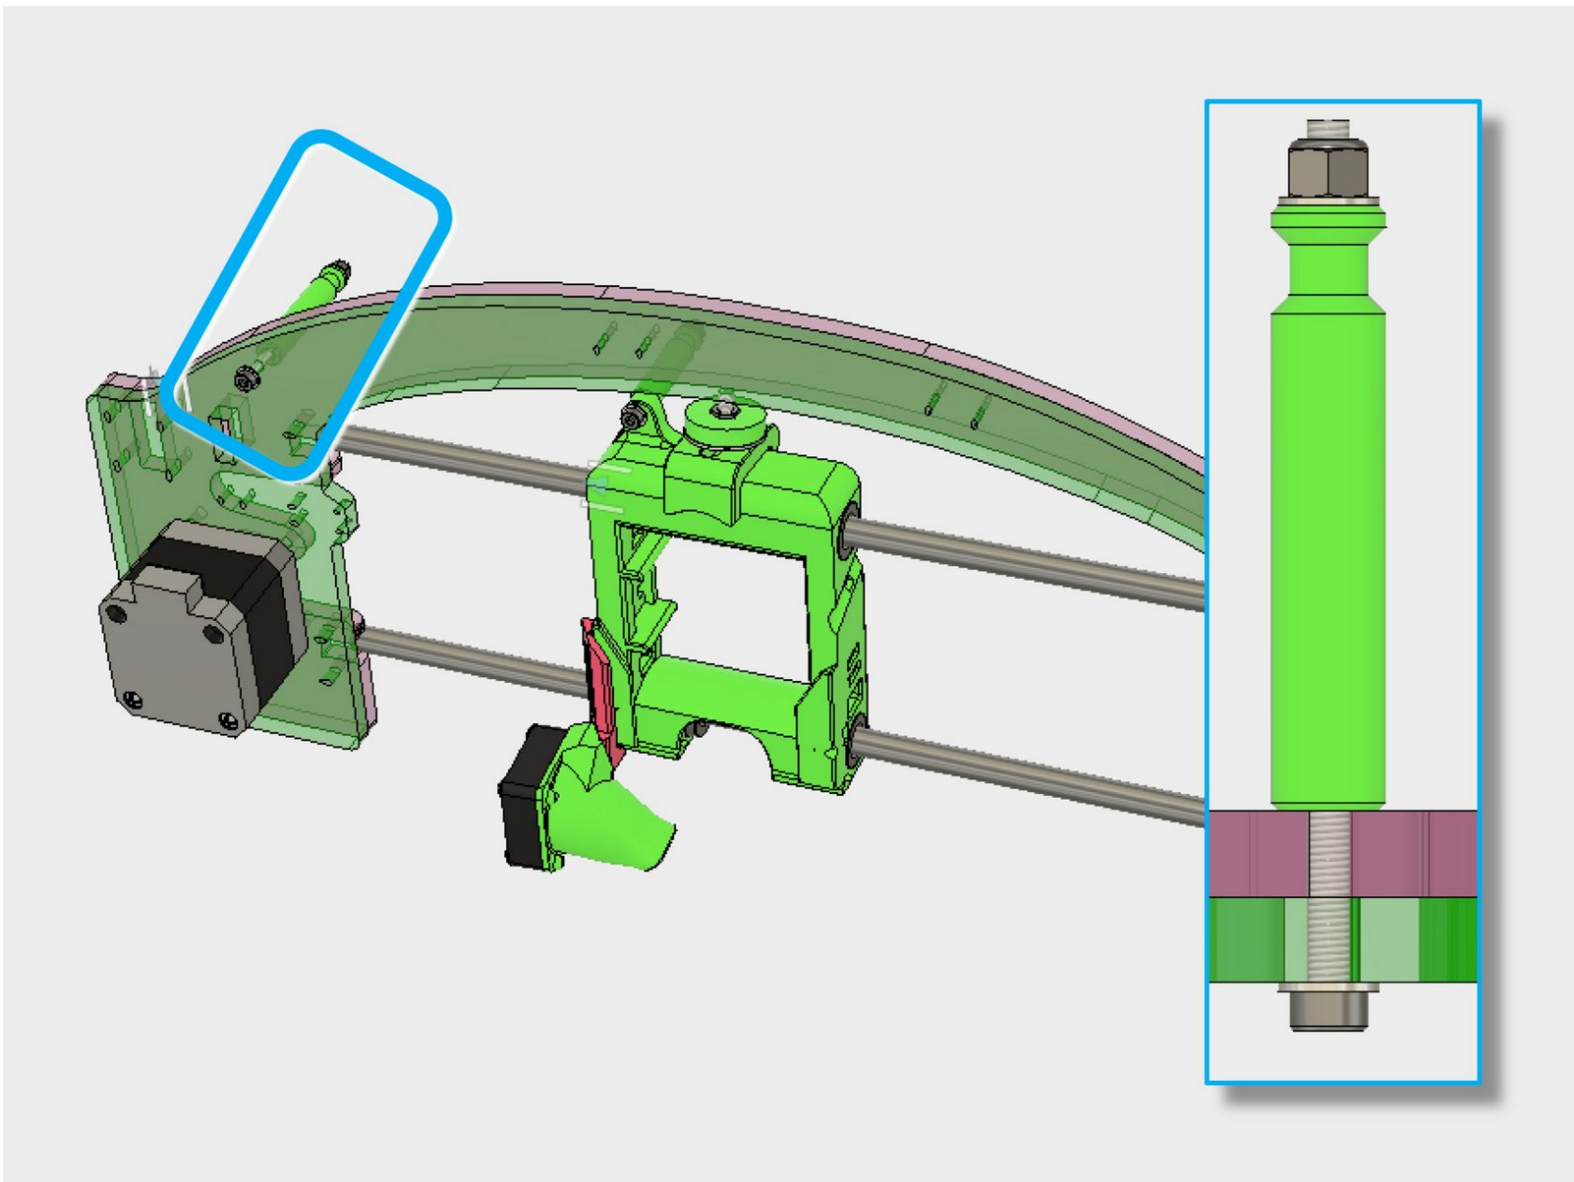


Step 1 — Install the X Endstop and Wire Harness

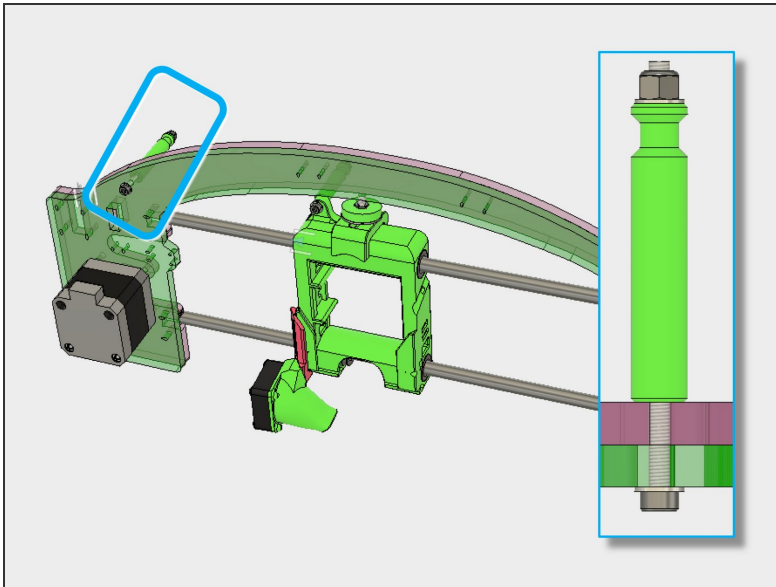


- M3 Nylock
- M3 Regular washer
- "LONG" green stand-off
- X Assembly Acrylic pieces
- M3 Regular washer
- M3x60 socket head screw

Step 2

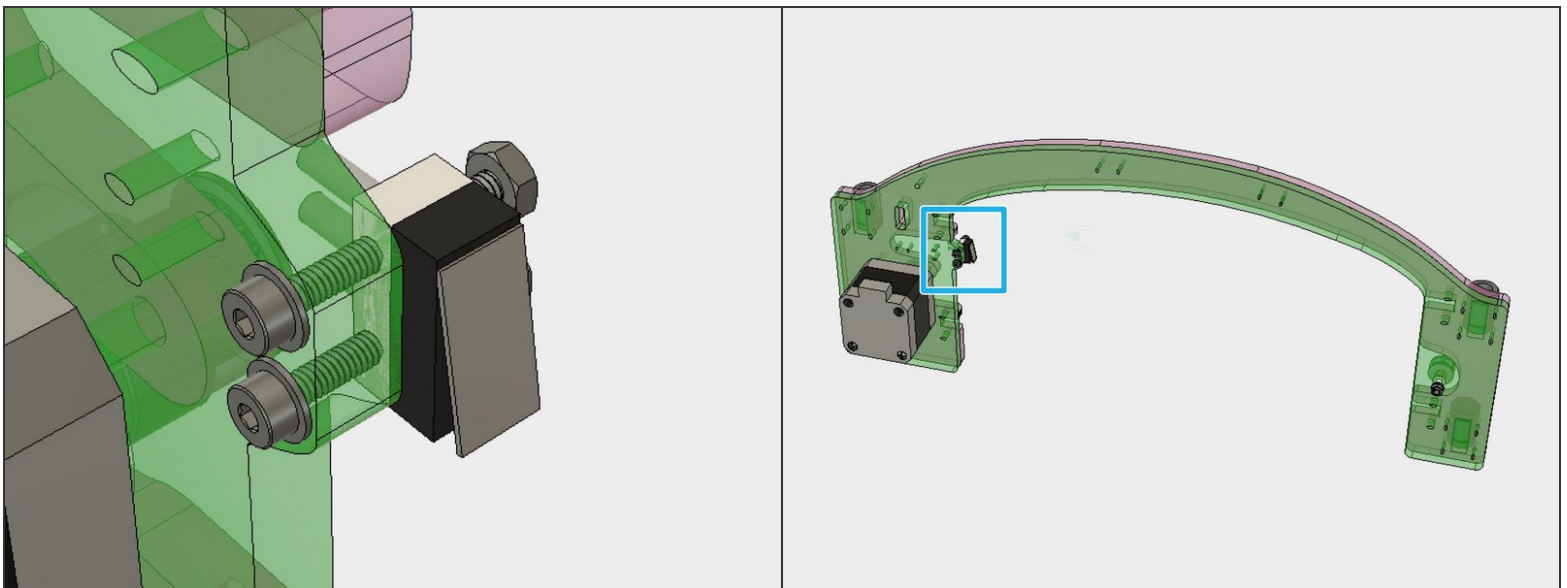

- M2x16 socket head screw
- M2 regular nuts
- M2 regular washers (on the acrylic side)

Step 3

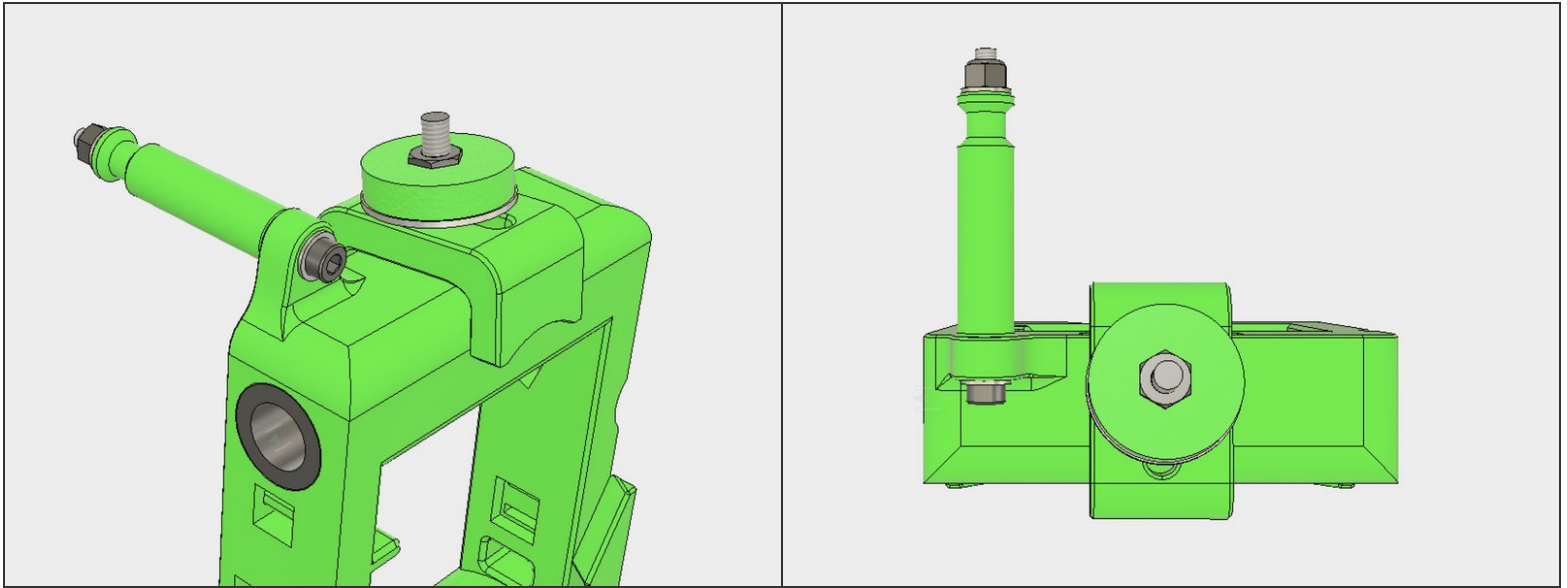

- M3 Nylock
- M3 Regular washer
- **SHORT** green stand-off
- X carriage
- M3 Regular washer
- M3x45 socket head screw