


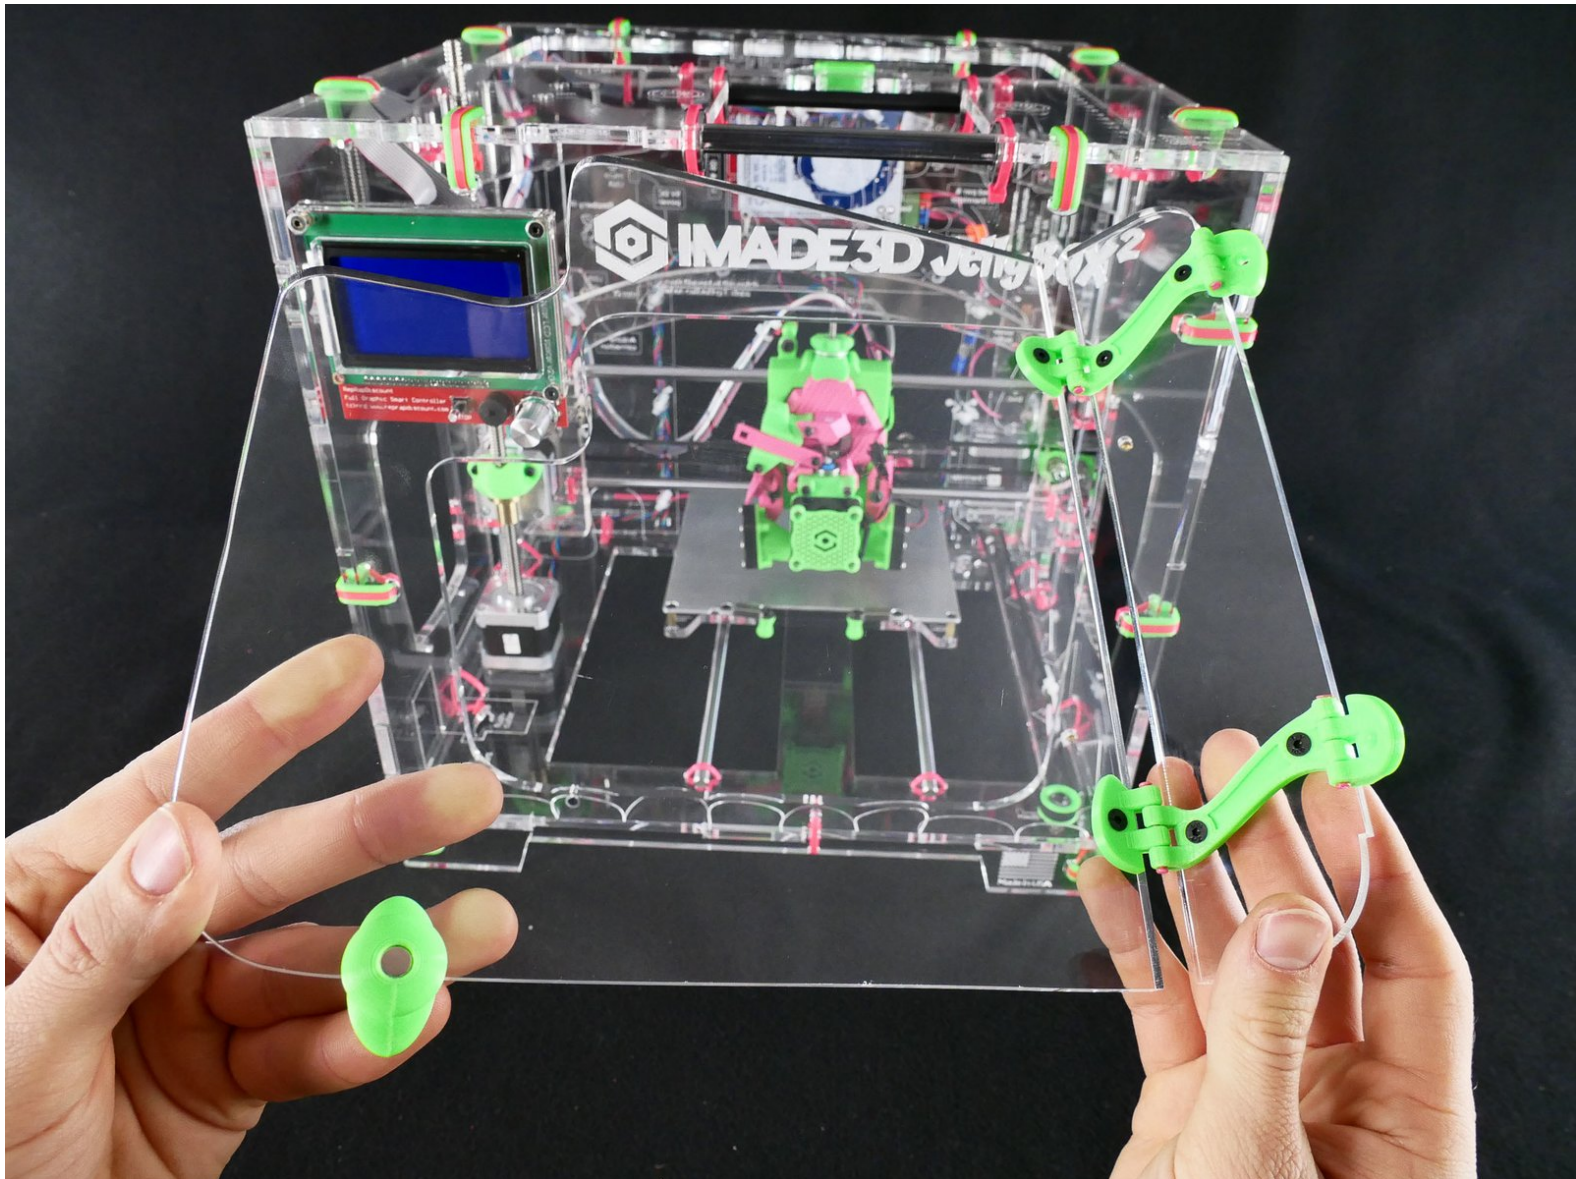

Front Door

Front Door




INTRODUCTION

Not the guide you are looking for?

Go back to the [← Makers Kit Build Flow.](#)

Step 1 — ↳ Prep the Front Door

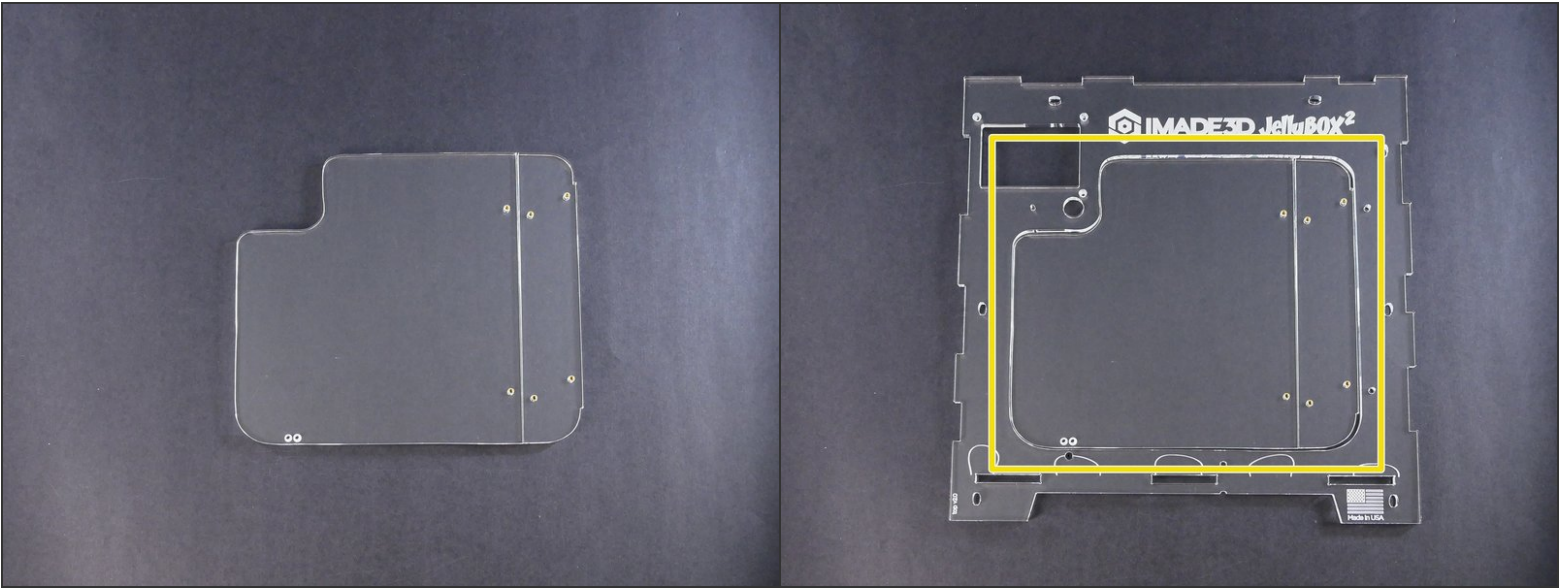

Step 2

M3 'nylock' locking nut

M3 oversized washer

M3 serrated washer

socket head screw M2x12
12mm

M3 plastite screw

flat head screw M3x8
8mm

10*

socket head screw M3x10
10mm

flat head screw M3x25
25mm

socket head screw M3x10
10mm

socket head screw M3x12
12mm

socket head screw M3x25
25mm

socket head screw M3x30
30mm

socket head screw M3x45
45mm

socket head screw M3x60
60mm

idlers

Y-assembly

feeder

electronics 'dogbone' stand-offs


spare parts

- M3x8 flat head


Step 3



Step 4

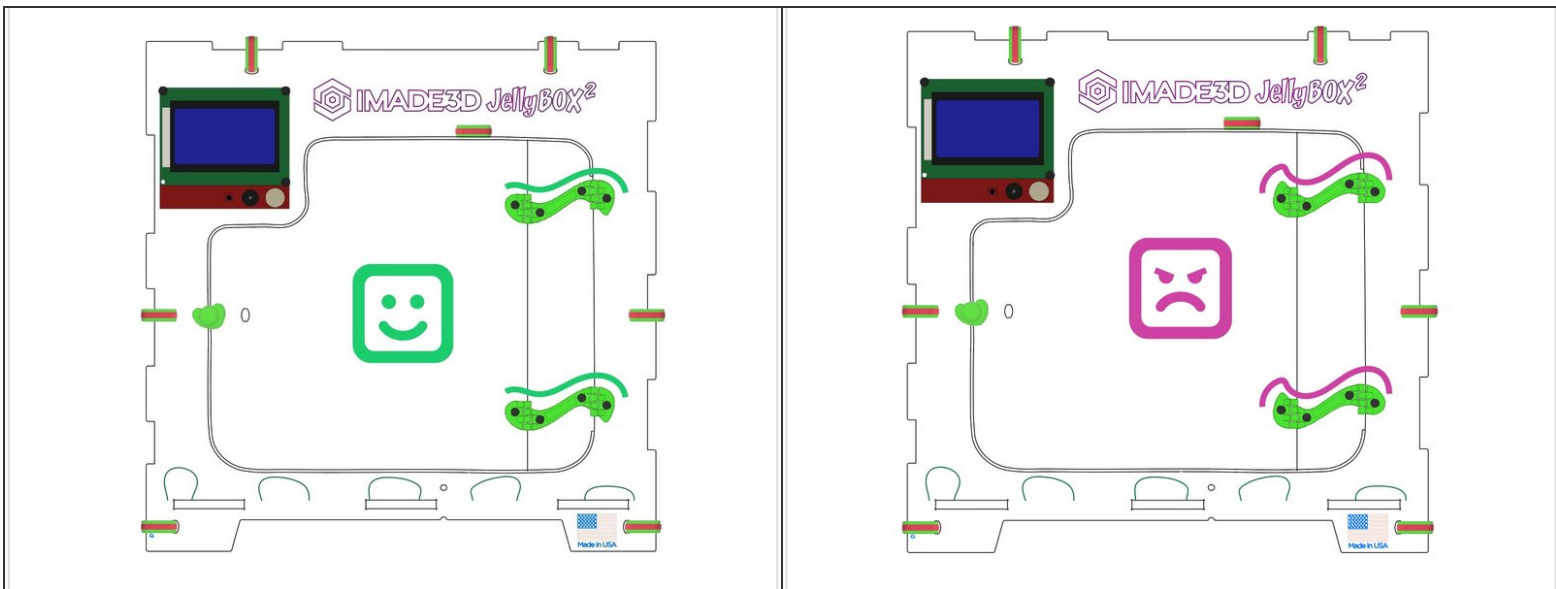

Step 5

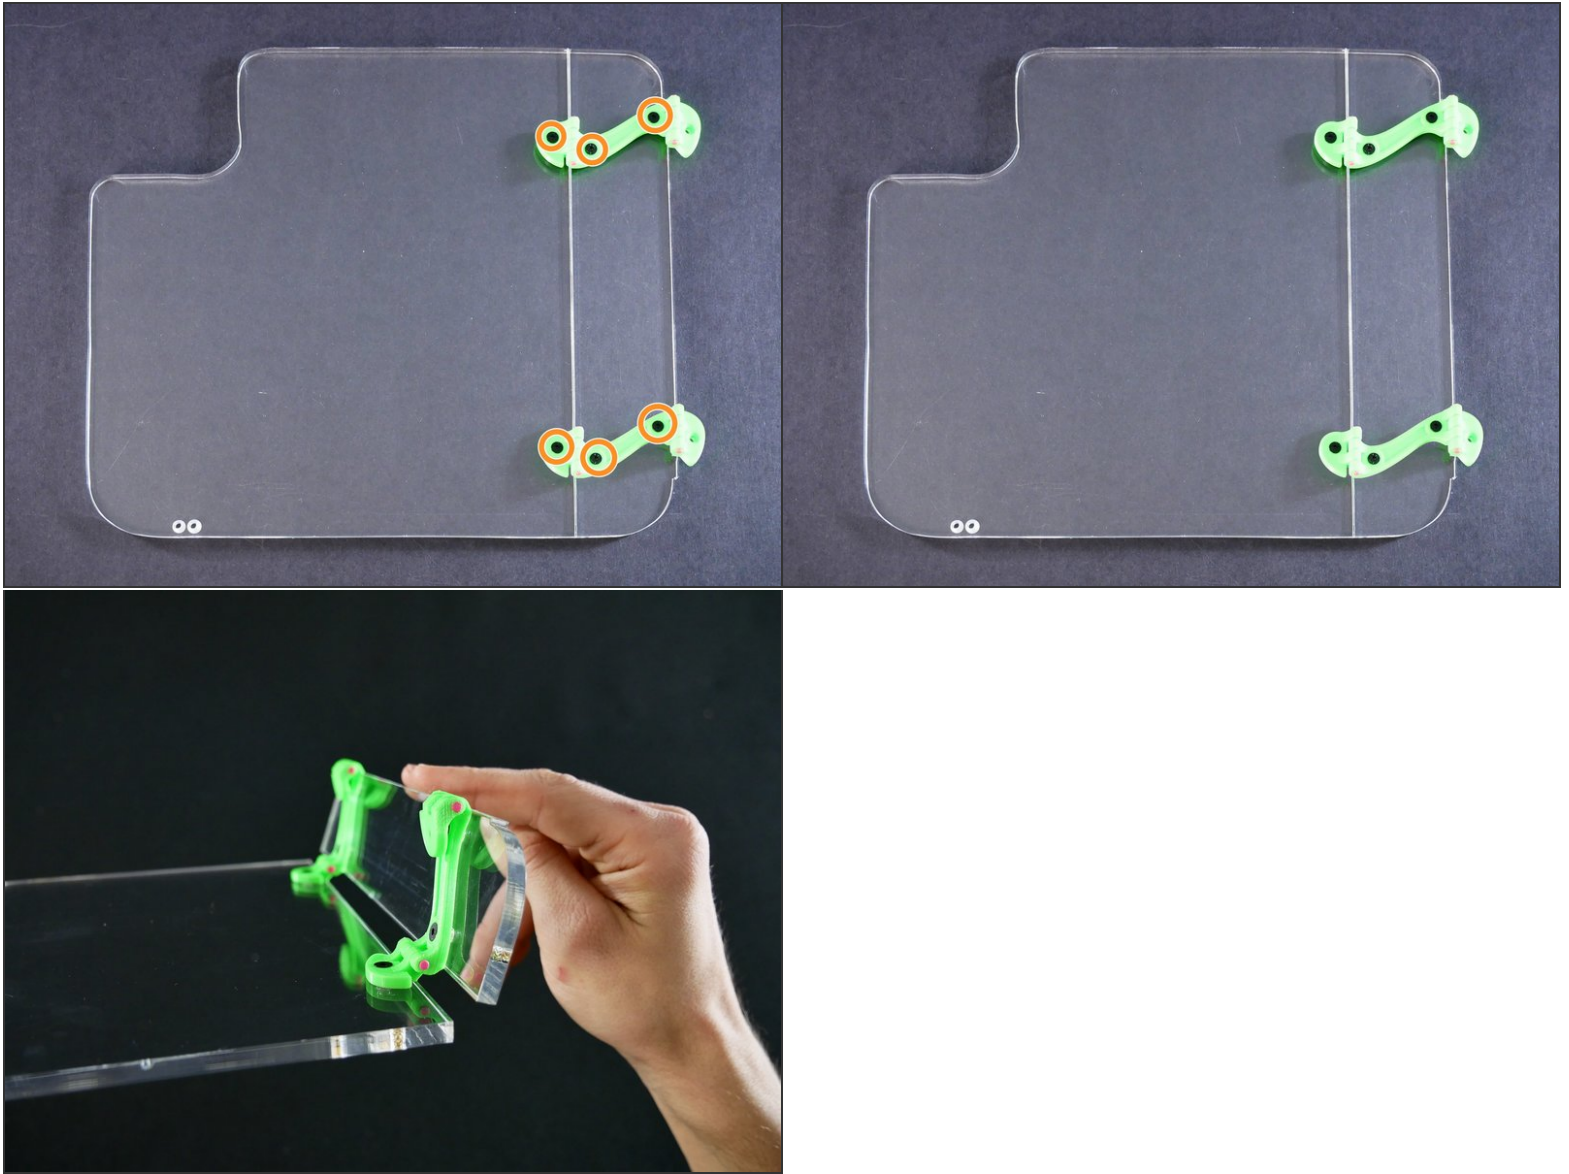


- M3x8 flat head


Step 6



Step 7

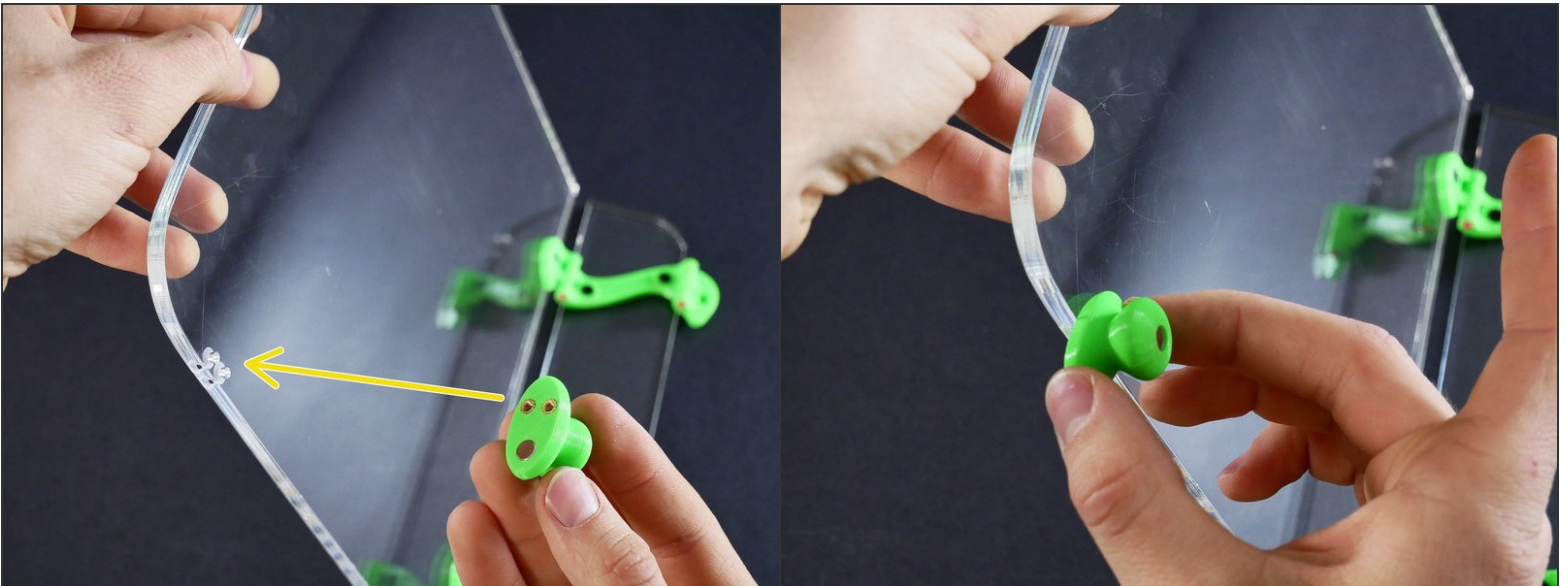


Step 8

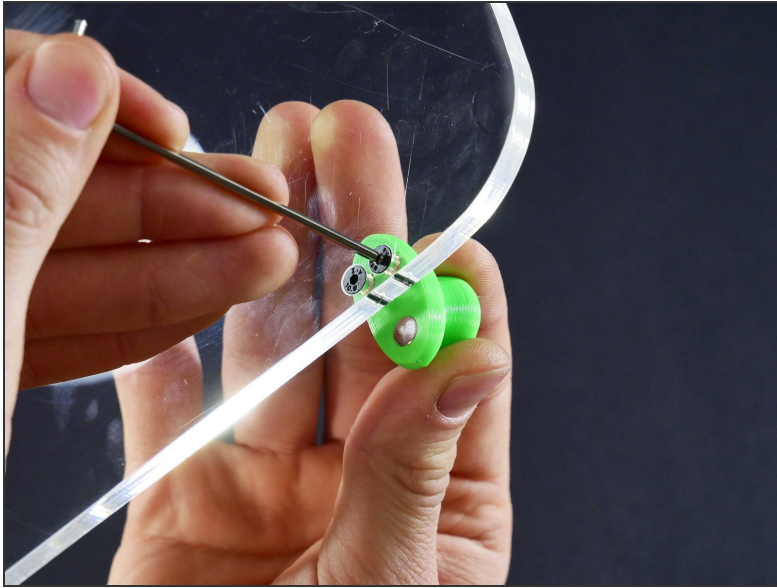


- M3x8 flat head


Step 9

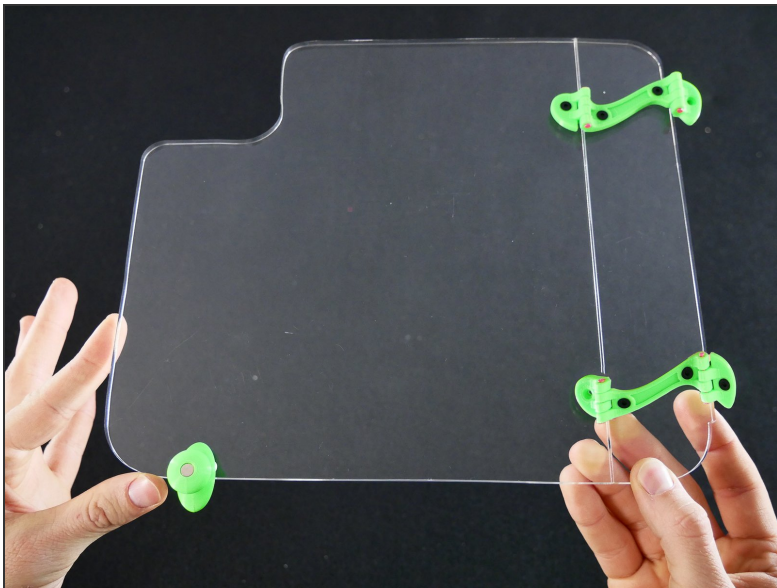

Step 10 — ↪ Install the Front Door

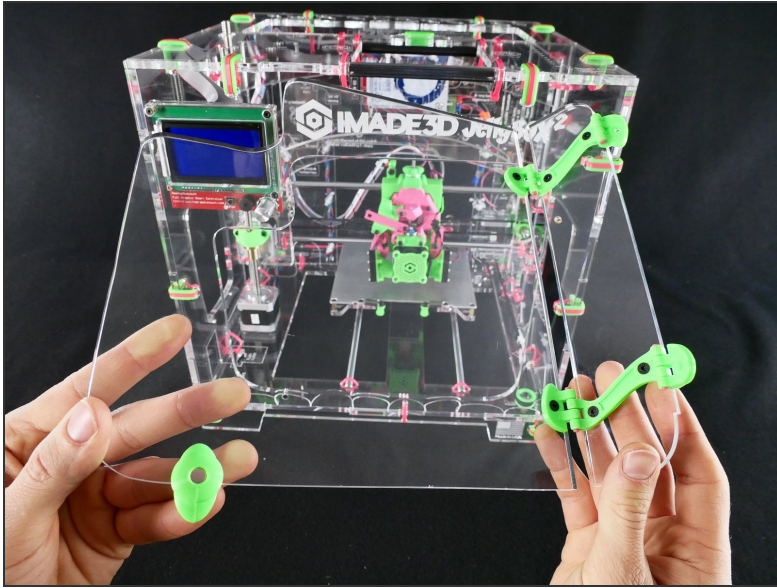


Step 11

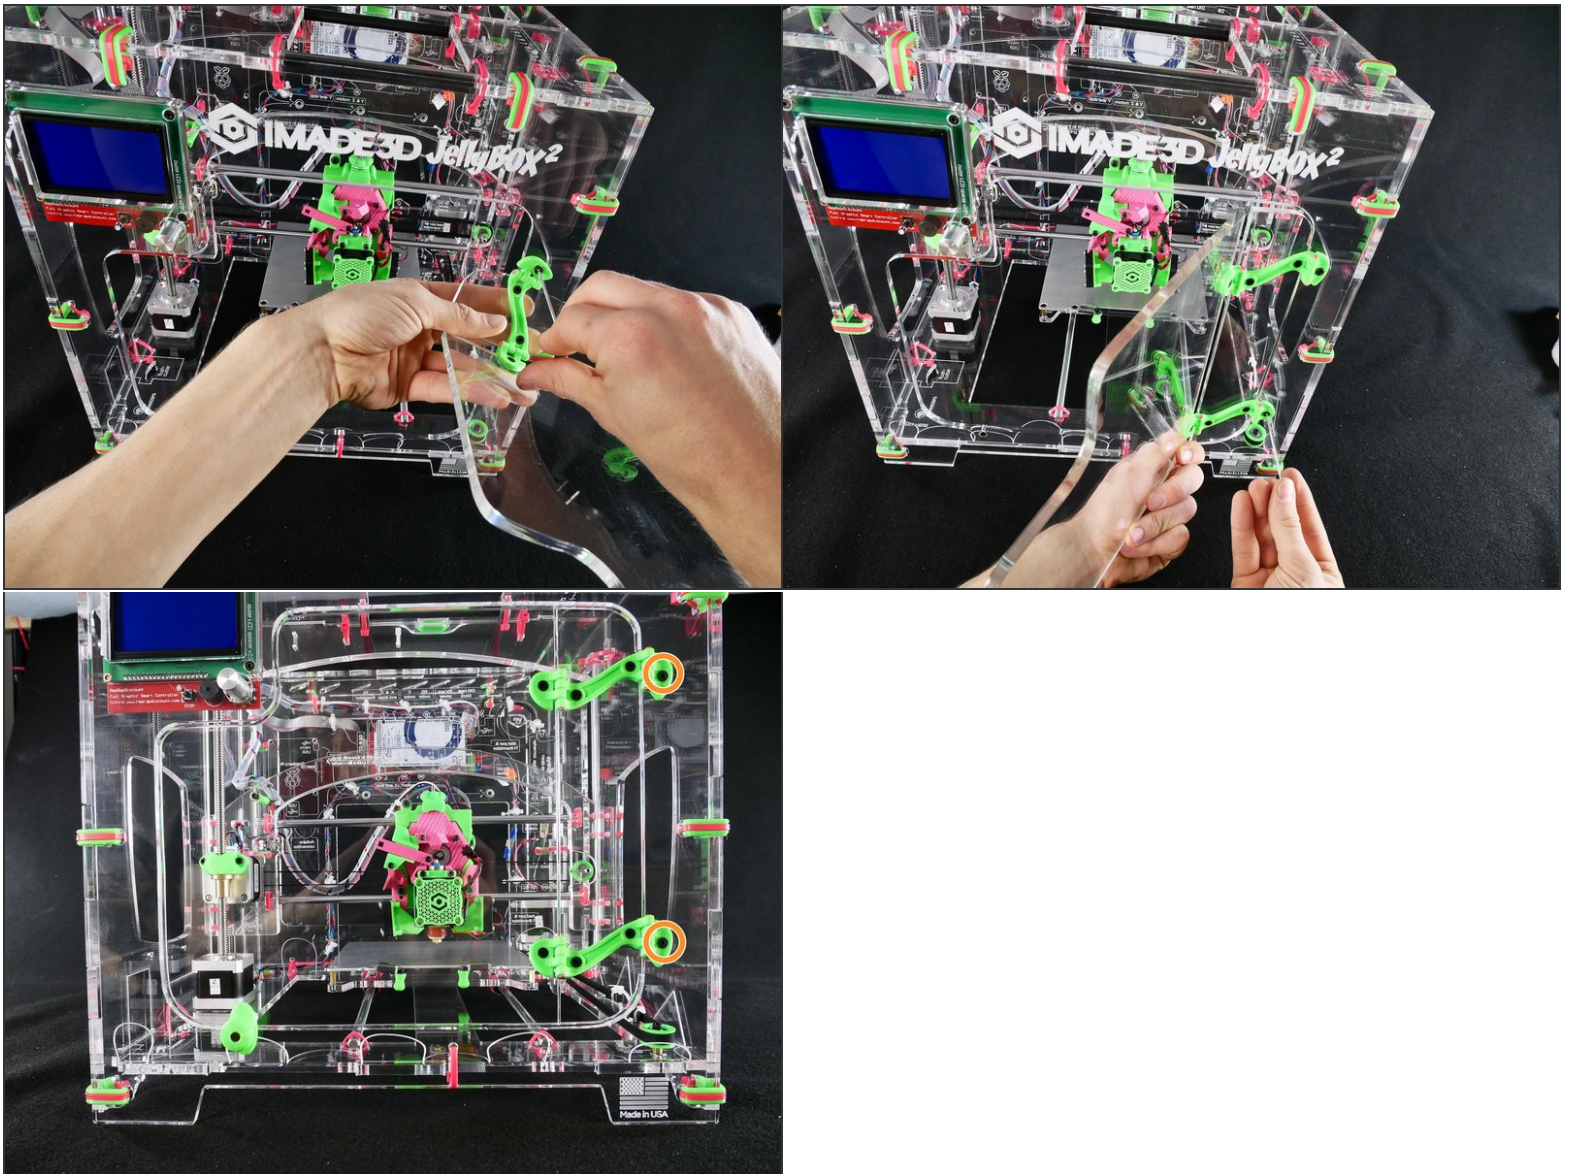

- M3x8 flat head

Step 12

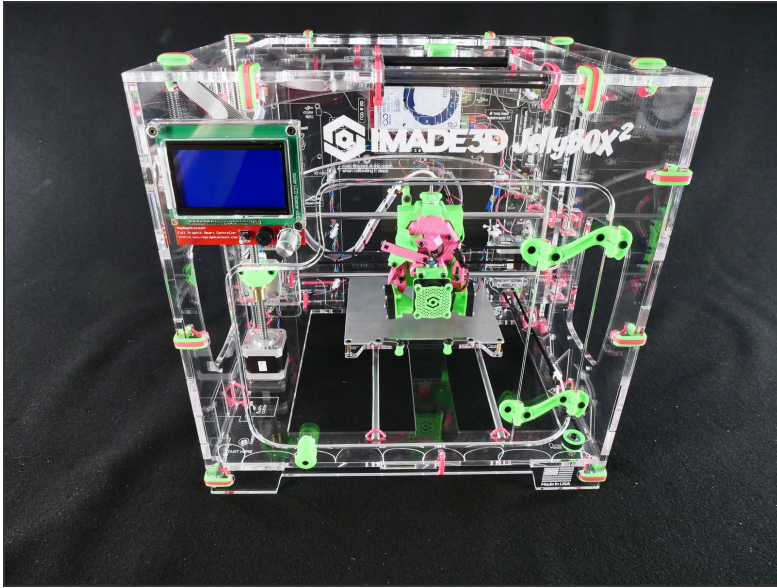

What's Next?

Get back to the [← Makers Kit Build Flow](#) and continue with the next guide.